



QUICK START GUIDE

VOKKERO ELITE PLUS

This Quick Start Guide presents the key steps for rapid installation of the VOKKERO ELITE PLUS communication system.

For the complete user guide and regulatory documents, scan the QR code or visit our website :
<https://download.vogo-group.com>



Install your VOKKERO ELITE PLUS system

1.

Connect the configurator and place the terminals in the charger slot.

Orange LED = Still charging
Green LED = Full charged
Red LED = Not seated properly



FOCUS ON: MASTER ROLE

This role is used to synchronize the other terminals. You can recognize the Master terminal thanks to its purple network icon.



IMPORTANT:

- If the MASTER is not ON = no communication possible
- Never have 2 MASTER terminals ON at the same time

Set up a conference in a few seconds



The terminals are delivered pre-configured and ready-to-use.
You can rapidly reconfigure all the conference with «Quick Config.».

Four «Quick Config.» options are available, depending on your application:



- **VAR football «Quick Config.»** : used for games with VAR where a technician can assist referees and has to setup main and backup VAR audio lines as well as backup spare terminals for referees.

> Put at least 4 ELITE PLUS terminals on the charger and connect your main Wireless Interface (WI) on the USB dock of the configurator.


> Press the runner icon and select main parameters:

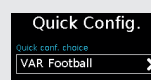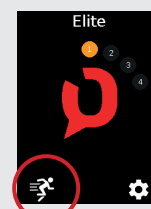


2.

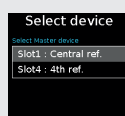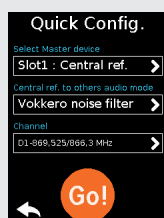

Select which slot you want for MASTER between CENTRAL REF (device in Slot n°1) or the 4th referee (device in slot n°4)

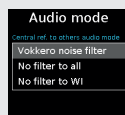


Define the way CENTRAL REF audio will be sent to the others terminals / users

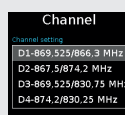

Choose a frequency

> Unplug MAIN WI and connect a second WI if you want to add a backup WI & validate


> Configuration is complete when «COMPLETED» is displayed

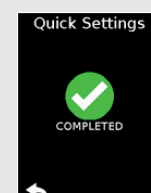

Terminal icon for VAR Football configuration:




- **Standard «Quick Config.»** : all terminals are configured in the same way (all users of the conference with green antenna icon) except the terminal located in slot n°1 which will be CENTRAL REF + MASTER Role.

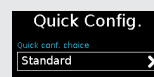


> Put all ELITE PLUS terminals on the charger

> Press the runner icon and select main parameters: choose an audio mode, frequency & GO

Terminal icon for Standard configuration:

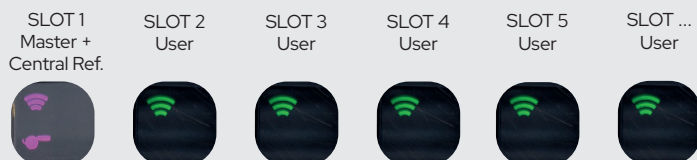

- **Volleyball (FIVB) «Quick Config.»** : all terminals are set up according to the referee configuration defined by the FIVB.

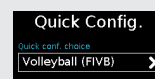

- **Ice Hockey «Quick Config.»** : all terminals are set up according to the Ice Hockey referee configuration.




> Find all the configuration options in the User guide by scanning the QR code.

FOCUS ON: ADVANCED SETTINGS


For more advanced configuration, use the rotary switch to access advanced parameters, such as:




Name your ELITE terminal

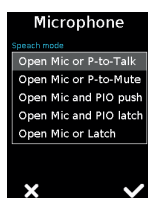

Microphone Mode

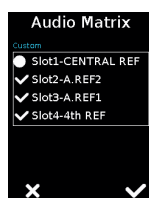


Audio Matrix

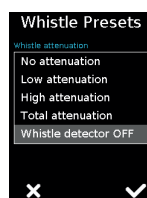

Whistle Presets



Encryption option

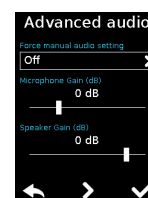

Advanced audio

Connect your headset

3.

Plug the headset into the connector at the top of the terminal.

Adjust the volume by pressing the +/- buttons.

IMPORTANT:

- Line up the 2 red marks of the product and the connector
- To disconnect the headset, grasp the secure connector ring
Do not turn the connector or pull the cable!



FOCUS ON: RECORDING

You can record your communication to insert a SD card into the dedicated slot.

- Push the function button for 2 seconds
- The recording icon should appear and stay fixed
- To stop recording, push the function button again. The recording icon should disappear.




Now you're ready to communicate!


BONUS : Decrease the sensitivity to improve resistance at the 4G/5G interferences

The number of operator deployments of 4G/5G mobile telecommunications networks grew considerably especially near or inside the sport arenas.


By activating the "Dense 5G area" feature, ELITE PLUS maximizes and secures refereeing communication by reducing the impacts of the 4G/5G network.

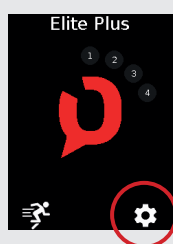

Select the rotary switch

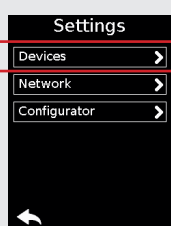

Choose a specific terminal or gateway

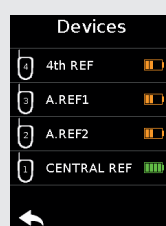

Activate the Radio sensitivity option and apply it to all terminals



IMPORTANT: by default, this option is configured to Maximum sensitivity, as the «Dense 5G area» may have an impact on radio range. Activate only if you have interferences from 4G/5G.

COMHEAD®
 PROTECTIVE EAR-TO-EAR COMMUNICATION



Comhead Headset Company GmbH
 Borsteler Chaussee 51
 22453 Hamburg
 Germany

www.comhead.de
 info@comhead.de
 +49 40 500 580 20