



TILDE PRO

quick userguide

- 1# GET STARTED
- 2# QUICK OVERVIEW
- 3# TELEPHONY
- 4# COMMUNICATION
- 5# NOISE-CANCELLING
- 6# HD AUDIO
- 7# BATTERY LIFE

★ CUSTOMER SERVICE



Comhead Headset Company GmbH

Die Headset Spezialisten

Borsteler Chaussee 51 | 22453 Hamburg | Tel.: +49 40 500 580 20
www.comhead.de

DESIGN



Place or remove the boom-microphone on the right side of the headset.



Over-ear or on-ear pads are interchangeable. Line up the colored spots to insert the pad at the right place, turn it clockwise.

START-UP



 **ON**
short press (0.5 sec)

 **OFF**
short press (0.5 sec)

 **BLUETOOTH**
long press (3 sec)

MODULAR DESIGN
detachable boom-microphone
interchangeable ear pads

 **MADE IN FRANCE**
designed in Paris
made in France



NOISE-FREE COMMUNICATION
face-to-face conversation
wireless telephony
vocal commands

START-UP
on / off
Bluetooth pairing

MEDIA
volume +/-
play-pause
next-previous song

ACTIVE NOISE-CANCELLING
adjustable from 0 to -30 dB



BOOM-MICROPHONE

TILDE® microphone ensures crystal clear calls with secrecy at both ends of the line.

PLACE/ADJUST TILDE® BOOM-MIC

- 1- push at the end of the removable ORO SOUND cover to remove it. Put the boom-microphone instead.
- 2- bend the boom to place the pebble in front of your mouth.



QUICK MUTE
short press

CALL PICKUP
short press

CALL HANGUP
long press



VOLUME
short press +/-

MUTE
long press -

FACE-TO-FACE CONVERSATION
short press

VOCAL COMMANDS
long press



TILDE
VOICE FIRST

○ "AVAILABILITY" LIGHT
face-to-face conversation ongoing

○ "BUSY" LIGHT
call/vocal command ongoing

ACTIVE NOISE-CANCELLING



ANC ON/OFF
short press

BE AWARE OF SURROUNDINGS

adjustable regulation: hold up
maximum awareness: push up and release

BE IN A QUIET PLACE

adjustable regulation: hold down
maximum noise reduction: push down and release

HIGH DEFINITION MUSIC

PLUS BUTTON (+)

volume up: short press

next song: long press

PLAY / PAUSE

short press

MINUS BUTTON (-)



 
volume down: short press

previous song: long press





HEADSET IN USE

- HEADSET ON 
- BATTERY LOW 
- PUT ON CHARGE 

HEADSET OFF

- CHARGING COMPLETED 
- CHARGING ONGOING 

RECHARGE
plug the USB-C cable

BATTERY LEVEL
short press x2 (sound notification)



CUSTOMER SERVICE

Monday to Friday 9.30am-6.30pm

support@orosound.com

+33 (0)1 47 42 85 56

WWW.ROSOUND.COM/SUPPORT