


OPENCOMM2 UC

User Guide

C110




Please refer to the following for more details

userguide.shokz.net/opencomm2uc

8000500222 (A0)

1.ON/OFF

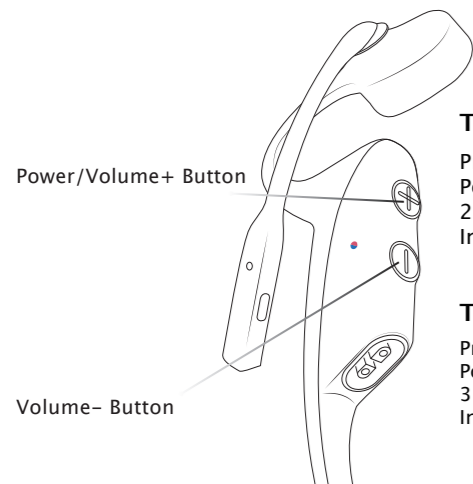


Turn on the headset

Press and hold the Power/Volume+ Button for 2 seconds until the LED Indicator flashes blue.

Turn off the headset

Press and hold the Power/Volume+ Button for 3 seconds until the LED Indicator flashes red.


2.Pairing to Mobile Device

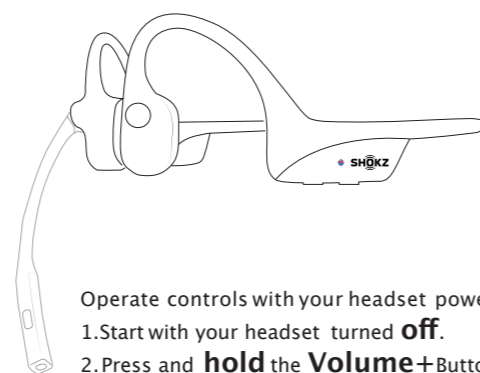

Operate controls with your headset powered off.


- 1.Start with your headset turned **off**.
- 2.Press and **hold** the **Volume+** Button until the LED Indicator **flashes red and blue** alternately.

3.Pairing to Mobile Device

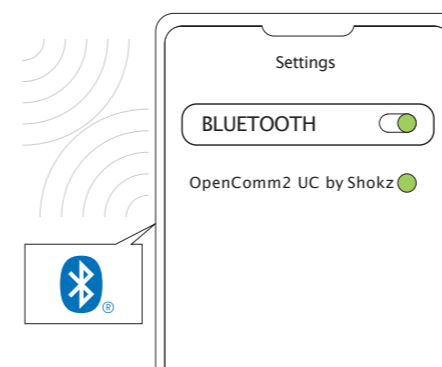


- 3.Select "**OpenComm2 UC by Shokz**" on your device's **Bluetooth** settings. Audrey will say, "connected".

4.Pairing to PC

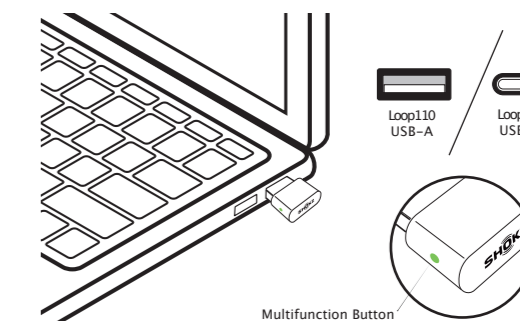


- 1.Start with your headset turned on.
- 2.Plug the included USB adapter into a USB port on your PC.
- 3.Connection is established when Audrey says "connected", and the LED Indicator on the USB adapter is solid blue.

5.Configure

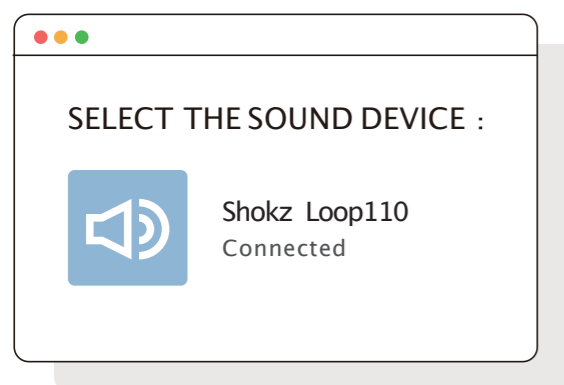


*To play music or take calls on the headset, please ensure the "Shokz Loop110" is both identified as the default input and output devices in your operating system's audio settings.

6.Button

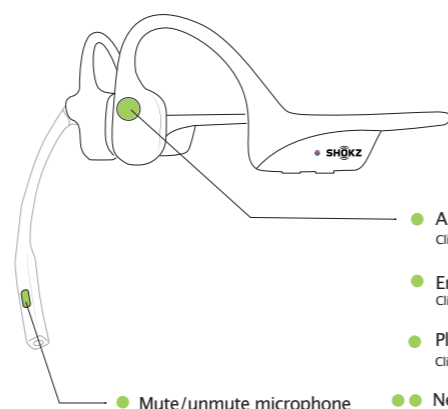


- Answer call
Click once
- End call
Click once
- Play/pause music
Click once
- Mute/unmute microphone
Click once when on a call
- Next song
Double-click while music is playing
- Previous song
Triple-click while music is playing

7.Reconnect to the last connected headset :

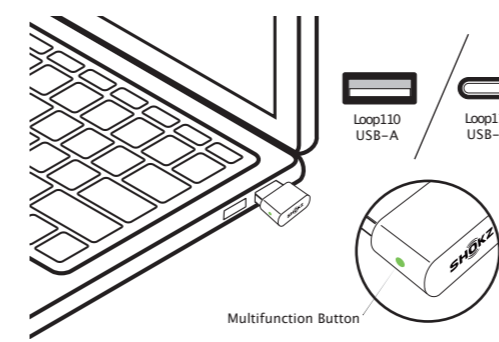

Click once ●
LED Flashes blue every second

8.How to Wear

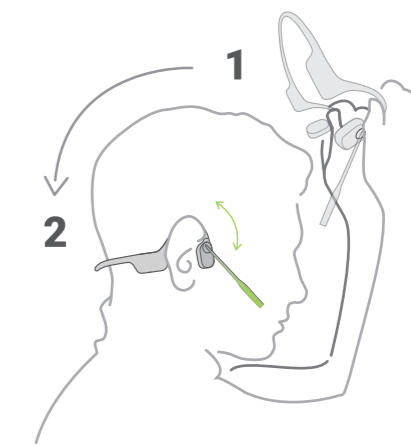

*Position the noise-canceling microphone close to your mouth.

